


### Shifting Restriction:

If the system determines that the travel device will be damaged or there will be over revving of the engine while shifting, the shift indicator (1) flashes and shifting can not be done.

- Operating the shift switch (+) or (-) once changes one gear. The sequential shifting cannot be done if the shift switch (+) or (-) is pressed and held. If changing gear continuously, take your finger off the shift switch (+) or (-) and then press the shift switch (+) or (-) again.
- If your speed becomes too slow in the 7-speed manual mode, it shifts down automatically.

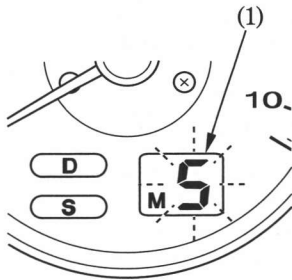

(1) Shift indicator