


## MECHANICAL KEY

This scooter has two mechanical keys.

Use the mechanical key to unlock the front seat lock and the console box without using a card key when the card key is lost, the battery is low (or dead) or doing maintenance. In case the battery runs flat or the card key is lost, take along the mechanical key (1) and ID tag (see page 74 ) separately.

See your Honda dealer when the mechanical key is lost.

- Mechanical key does not have the functions of Honda smart card key system.
- Do not store the mechanical key in the center compartment or the left console box. The mechanical key is used to unlock the ignition switch for an emergency (page 74).

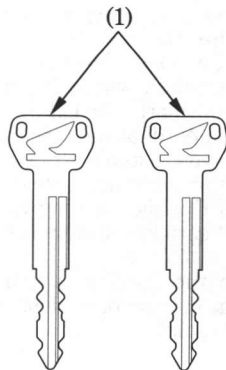

(1) Mechanical key