


## DOCUMENT BAG

The document bag (1) is in the document compartment (2) under the rear seat (page 102).

This owner's manual and other documents should be stored in the document bag. When washing your scooter, be careful not to flood this area with water.

Do not put the card key, mechanical key and ID tag under the rear seat.

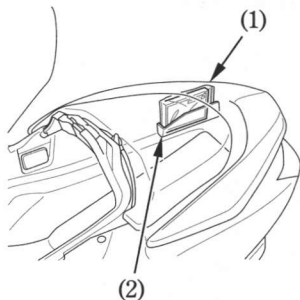


- (1) Document bag
- (2) Document compartment

## TRUNK LIGHT (NSS250A)

The trunk light (1) will be turned ON automatically when the front seat is opened. It is kept ON as long as the front seat is opened regardless of the position of the ignition switch.

The trunk light can be cancelled if the trunk light switch is at  $\bigcirc$  (OFF) position, either seat is open.

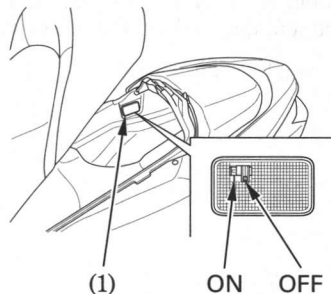

- (1) Trunk light