

FLOOR SIDE PANEL


The right and left floor side panels can be removed in the same manner.

Removal:

1. Open the front seat (page 101).
2. Remove the clip (1) and hooks A (2).
3. Remove the floor side panel (3) by removing hooks B (4).

Installation:

- Installation can be done in the reverse order of removal.

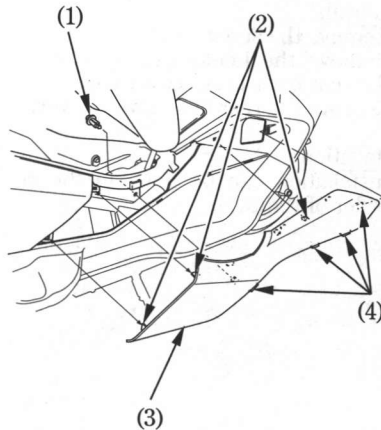

(1) Clip
(2) Hooks A

(3) Floor side panel
(4) Hooks B