


Engine Oil Filter

1. To drain the oil, remove the oil filler cap/dipstick and oil drain bolt and sealing washer (page 157).

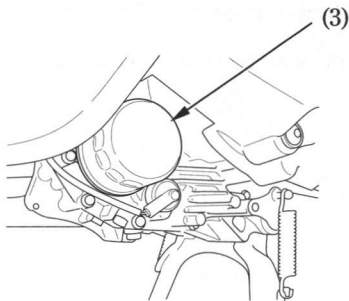

2. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter.
3. Apply a thin coat of engine oil to the new oil filter rubber seal (4).
4. Using a special tool and a torque wrench, install the new oil filter and tighten to a torque of:
26 N·m (2.7 kgf·m , 19 lbf·ft)

(3) Oil filter