


License Light Bulb

1. Remove the rear body lower cover (page 111).
2. Remove the screws A (1), clips (2) (page 151) and license light cover (3).
3. Remove the license light lens (4) by removing the screws B (5).
4. Pull out the bulb (6) without turning.
5. Install a new bulb in the reverse order of removal.

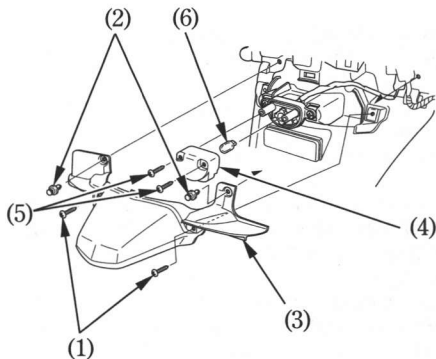

- | | |
|-------------------------|------------------------|
| (1) Screws A | (4) License light lens |
| (2) Clips | (5) Screws B |
| (3) License light cover | (6) Bulb |