

TICKET BOX

There is ticket box (1) above the left of the glove box.


The maximum allowable load of the ticket box is **0.3kg**.

Do not open and close the ticket box while riding the scooter.

To open the ticket box (1), push the "PUSH" mark on the right of the ticket box cover (2).

NOTE:

- * Make sure the ticket box cover is closed before riding.
- * When washing your scooter be careful not to flood this area with water.
- * Do not store valuables or fragile articles in the ticket box.

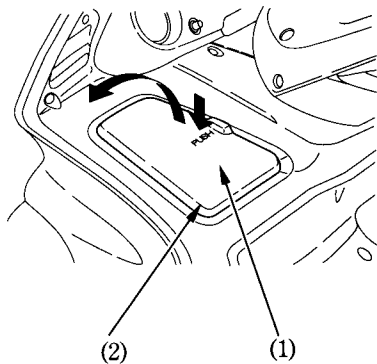

- (1) Ticket box
(2) Ticket box cover