

- Once you get off the scooter, do not hold your body or hand against the seat, or place cargo on it while the idle stop system is in operation. The engine may be restarted if the throttle grip is rotated accidentally.

