

Symptom	Check	Remedy
<p>Engine is not started even when the throttle is opened.</p>	<p>Is the standby indicator flashing ? Check the following if it is turned OFF.</p>	<p>Perform the following if the standby indicator is turned OFF.</p>
	<p>Is the rider seated in the seat in proper posture ?</p>	<p>The idle stop system does not function when the seat is not loaded with weight. The system will be released if the seat is not loaded with weight for more than about 3 minutes. Sit in the seat in proper posture.</p>
	<p>Is the idle stop switch set in the IDLING position ?</p>	<p>Set the idle stop switch in the IDLING STOP position.</p>