

## IDLE SPEED

(Refer to the maintenance precautions on page 56).

The idle speed adjustment procedure given here should only be used when changes in altitude affect normal idle speed as set by your dealer. See your authorized Honda dealer for regularly scheduled carburetor adjustments, including individual carburetor adjustment and synchronization.

### NOTE:


\* The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

1. Warm up the engine, shift to neutral and place the motorcycle on its center stand.
2. Adjust idle speed with the throttle stop screw (1).

Idle Speed:

1,200  $\pm$  100 rpm

1,200  $\pm$  50 rpm [SW type]

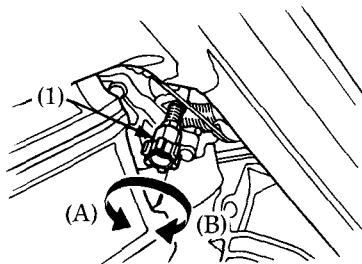

(1) Throttle stop screw

(A) Increase

(B) Decrease