

Ref. No.	Description	Function
1	Speedometer	Shows riding speed.
2	Odometer	Shows accumulated mileage.
3	Neutral indicator (green)	Lights when the transmission is in neutral.
4	High beam indicator (blue)	Lights when the headlight is on high beam.
5	Tachometer	Shows engine rpm.
6	Tachometer red zone	Never allow the tachometer needle to enter the red zone, even after the engine has been broken in. CAUTION: * The red zone indicates the maximum limits of engine speed and running the engine in the red zone may adversely affect its service life.
7	Right turn signal indicator (amber) (green: FI type only)	Flashes when the right turn signal operates.