


Installation Notes:

- To install the rear wheel, reverse the removal procedure.
- Make sure the tang (9) on the swingarm is located in the slot (10) in the brake panel (11).
- Tighten the axle nut to the specified torque.
Axle nut torque:
95 N·m (9.5 kg·m, 69 ft·lb)
- Adjust the brake (page 15) and drive chain (pages 63–67)
- Apply the brake several times and check for free wheel rotation when released.

▲ WARNING

- * **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

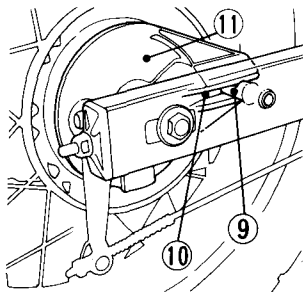

(9) Tang
(10) Slot

(11) Brake panel