

<b>(Ref.No.) Description</b>	<b>Function</b>
(7) PGM-FI indicator (red)	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON. If it comes on at any other time, reduce speed and take the motorcycle to your authorized Honda dealer as soon as possible.
(8) Side stand indicator (amber)	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 52) is activated.
(9) High beam indicator (blue)	Lights when the headlight is on high beam.
(10) Neutral indicator (green)	Lights when the transmission is in neutral.
(11) Turn signal indicator (green)	Flashes when either turn signal is operated.