

MAINTENANCE OPERATIONS


Engine Oil Level

Check engine oil level at the start of each day the motorcycle is to be operated.

The oil filler cap ① is located on the right crankcase cover near the kick starter and contains a dipstick for measuring oil level. Oil level must be maintained between

the upper ② and lower ③ oil level marks on the dipstick.

Oil level must be checked with the motorcycle standing upright on level ground and the oil filler cap touching the filler orifice but not screwed in.

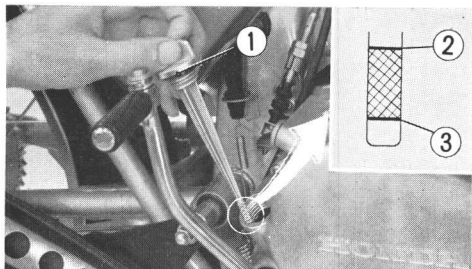

- ① Filler cap dipstick
- ② Upper level mark
- ③ Lower level mark

Engine Oil Change

Engine oil should be changed in accordance with the Maintenance Schedule on page 23. Use only motor oil of the grade and viscosity recommended on page 15.

When changing oil, drain the used oil from the crankcase while the engine is warm. This will ensure complete and rapid draining.

1. Remove the oil filler cap ① from the right crankcase cover.