## NOTE

- It is important to follow the tire recommendations (see page 30). The ABS computer works by comparing wheelspeed. Nonrecommended tires can affect wheelspeed and may confuse the ABS computer.
- ABS does not function at low speeds (approximately 7 km/h or below).
- The ABS does not function if the battery is discharged.

## **ABS Warning Light**

Normally, this light comes on when the ignition is turned ON and goes off after starting to ride (see page 14). If there is an ABS problem, the warning light comes on and remains on — or blinks. The system does not operate when the ABS warning light is ON or blinking.

