


MAINTENANCE

- Side Cover

1. Remove the saddlebag (see page 40)
2. Remove the seat (see page 36)
3. Remove the screw. Pull the rear of the cover first, then rotate it clockwise and pull the front of the cover.

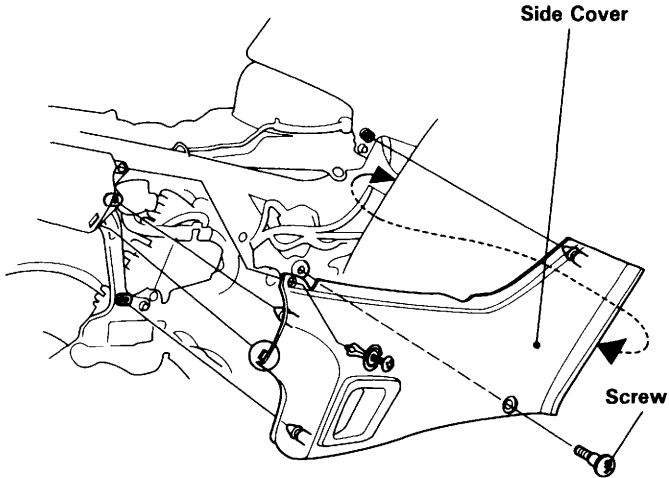

- Air Duct/Maintenance Cover

Remove the bolts, pull the cover out, then slide it to the rear.

