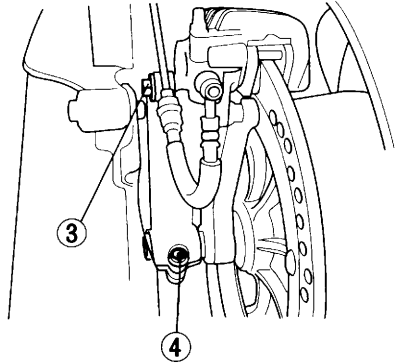
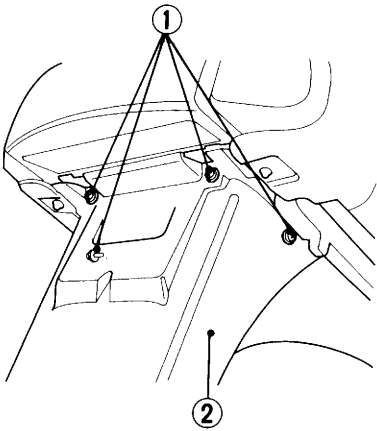

REAR WHEEL REMOVAL

For related torque specifications, see page 85. The numbers indicate the sequence of disassembly.



3 Loosen the bolt

