

# ESSENTIAL INDIVIDUAL COMPONENTS

## IGNITION SWITCH

The ignition switch is on the handlebar cover.

| Key Position            | Function Key  | Key Removal            |
|-------------------------|---|------------------------|
| ON                      | All electrical circuits are on. Engine and lights can be operated.                          | Key cannot be removed. |
| OFF                     | All electrical circuits are off.<br>(Except for Digital clock)<br>Engine cannot be started. | Key can be removed.    |
| LOCK<br>(steering lock) | Steering is locked. Engine and lights cannot be operated.                                   | Key can be removed.    |

