










 



ABS and TCS Indicator Light Operation

	Ignition "ON"	After Starting to Ride	Normal: OK Not working: NG
ABS Indicator Light	  Comes ON  Blinks	  Goes OFF  Remains ON  Blinks  Blinks	OK NG NG NG
TCS Indicator Light	 Comes ON  Blinks	 Goes OFF  Remains ON  Blinks	OK NG NG NG

If either the ABS or TCS Indicator Light does not operate properly, See your authorized Honda dealer for service.