

# ELECTRICAL

---

## Main fuse:

The main fuse, located on the starter magnetic switch behind the left side cover, is:

**30A**

1. Turn the ignition switch OFF before checking or replacing a fuse to prevent an accidental short circuit.
2. Remove the left side cover (page 71).
3. Disconnect the wire connector of the starter magnetic switch.
4. Pull out the fuse. If the main fuse is blown, install a new fuse.  
The spare main fuse is located under the starter magnetic switch.
5. Reconnect the wire connector and install the left side cover.

