

ELECTRICAL

ACG fuse:

The ACG fuse, located under the left side cover, is:

55A

1. Turn the ignition switch OFF and disconnect the negative (-) terminal lead from battery before checking or replacing a fuse to prevent an accidental short circuit.
2. Remove the left side cover (page 71).
3. Remove the fuse cover.
4. Loosen the screws then replace the fuse.
The spare fuse is located in the fuse cover.
After replacing the fuse, tighten the screws.
5. Install the fuse cover and left side cover.

