


## Mileage and Fuel Consumption Unit Change

The odometer/tripmeter displays either “km” or “mile”. (E type only)


The current/average fuel consumption meter displays either “km/ℓ” or “mile/ℓ” (E type)/“km/ℓ” or “ℓ/100 km” (ED, F and U type).

Press the FCD/H button to get the fuel consumption meter display shown below.

Press and hold the FCD/H button for more than 2 seconds to select.

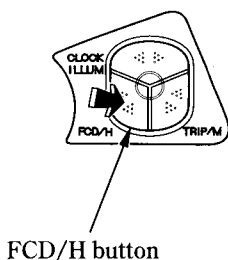

No indication

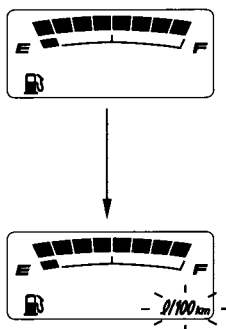

## Display Illumination Adjustment

The brightness of a display can be adjusted in three stages.

To adjust the brightness of the display, press the CLOCK/ILLUM button.

CLOCK/ILLUM button

