

# MAINTENANCE

---

## Overhead Cover

The overhead cover must be removed for engine oil and spark plug maintenance.

The right and left overhead cover can be removed in the same manner.

### Removal:

1. Remove the maintenance lid (page 88 ).
2. Remove the prong from the grommet.
3. Remove the overhead cover by removing the hooks from the slots.

### Installation:

- Installation can be done in the reverse order of removal.

