


---

## Headlight Bulb

1. Disconnect the connector.
2. Remove the dust cover.
3. Remove the bulb while pressing down on the pin.
4. Install a new bulb in the reverse order of removal.
  - Install the dust cover with its arrow mark facing up.

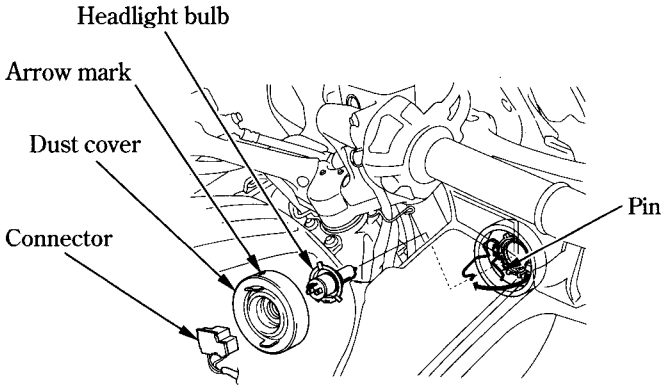

## Position Light Bulb

1. Remove the inner cowl (page 89 ).
2. Pull the position light socket and remove it.
3. Pull out the bulb without turning.
4. Install a new bulb in the reverse order of removal.

