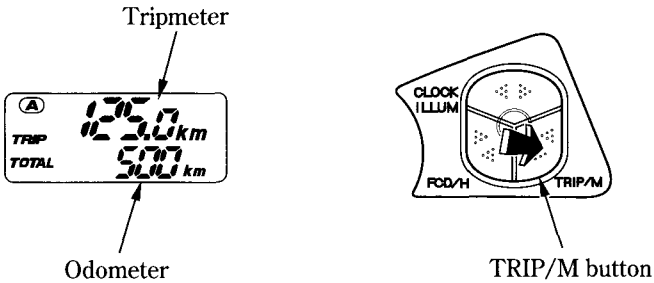
 

Odometer/Tripmeter

- ODO (Odometer) — shows the total miles (For E type) or kilometer (Except E type) ridden.
- TRIP (Tripmeter) — shows the number of miles (For E type) or kilometer (Except E type) ridden.



The tripmeter will show mileage in two sub modes, “tripmeter A” and “tripmeter B.”

Press the TRIP/M button to select the “tripmeter A” or “tripmeter B” mode.



To reset the tripmeter, press and hold the TRIP/M button for more than 2 seconds with the display in the “tripmeter A” or “tripmeter B” mode.

