


Fuel Consumption Unit Change

The current/average fuel consumption meter displays either “km/ℓ” or “ℓ/100 km”.

Press the FCD/H button to get the fuel consumption meter display shown below.

Press and hold the FCD/H button for more than 2 seconds to select.

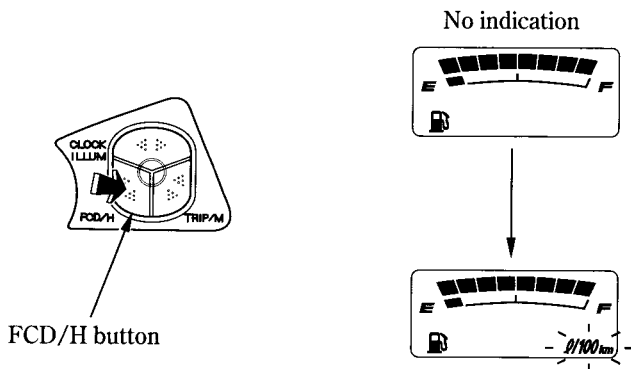

Display Illumination Adjustment

The brightness of a display can be adjusted in three stages.

To adjust the brightness of the display, push the CLOCK/ILLUM button.

CLOCK/ILLUM button

