
SEAT

To Remove the Rear Cowl:

Remove the rear cowl bracket by removing bolts A, bolts B and bolts C, collars and nuts. Remove the rear cowl.

To Remove the Seat:

Remove the bolt. Pull the seat back and up.

To Install the Seat:

Insert the prongs into the recesses and then push down on the rear of the seat. Tighten the bolt.

Be sure to align the holes in the rear of the seat with the adjuster when you install the seat.

To Install the Rear Cowl:

Install the seat. Tighten bolts A, bolts B and bolts C, collars and nuts.

Be sure the seat is locked securely in position after installation.

