

FEATURES

(Not required for operation)

7. Raise the front of the fuel tank and place the tank open rod between the front of the fuel tank and steering stem.

Do not raise the fuel tank higher than the stopper cable allows.

8. Tighten the nut while holding the pivot bolt at the other end with a wrench.

