


# MAINTENANCE

---

1. Park your motorcycle on its center stand on a firm, level surface.
2. To drain the oil, remove the oil filler cap, crankcase drain plug, and sealing washer.

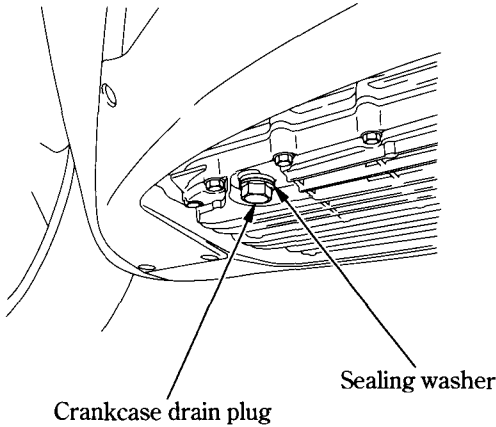

3. Remove the oil filter with a filter wrench and let the remaining oil drain out. Discard the oil filter.

