

# MAINTENANCE

---

## SPARK PLUGS

Refer to the Safety Precautions on page 77 .

Recommended plugs:

Standard:

CR7EH-9 (NGK) or U22FER9 (DENSO)

For extended high speed riding:

CR8EH-9 (NGK) or U24FER9 (DENSO)

### NOTICE

Never use a spark plug with an improper heat range. Severe engine damage could result.

1. Remove the maintenance lid (page 83 ).
2. Remove the right and left overhead cover (page 85 ).
3. Clean any dirt from around the spark plug bases.
4. Disconnect the spark plug caps. Take care to avoid damaging the spark plug wire when disconnecting the caps.
5. Using a spark plug wrench, remove the spark plugs.

