


Main Switch: The main switch ① is located on the left side of the main pipe.

Functions of the respective switch positions are shown in the chart below.

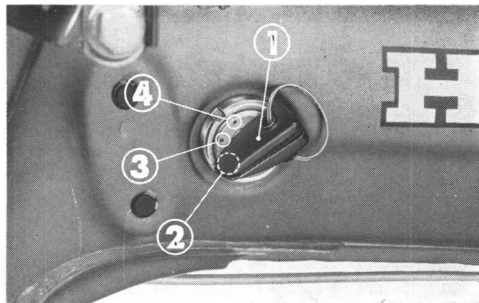

① Main switch

Key position	Function	Key removal
② black dot	Electrical circuit is opened, engine will not start.	Key can be removed.
③ red dot	Electrical circuit is closed, engine can be started (for day time operation).	Key can not be removed.
④ red dot	Electrical circuit is closed, engine can be started (for night time operation).	Key can not be removed.