



## MECHANICAL CONTROLS

**Seat Latch :** The seat latch ① is located on the left rear end of the seat. The seat can be raised by releasing the seat latch.

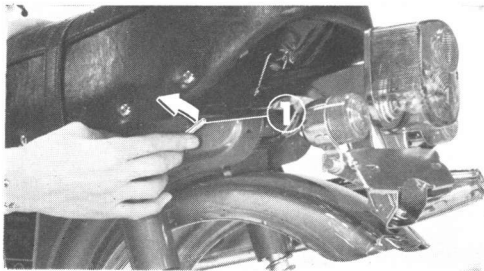

① Seat latch

**Choke Lever :** The choke lever ① is located at the left side of the carburetor. When the choke lever is down ① the choke is fully open (normal driving position). When the choke lever is up ② the choke is fully closed (cold engine starting position).

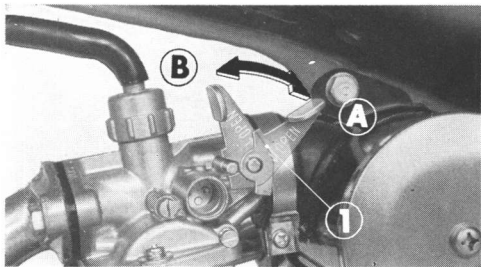

① Choke lever