



[Only for ST 70-I and Australia type]

6. Remove the throttle cable cover ② and separate the throttle cable ①.

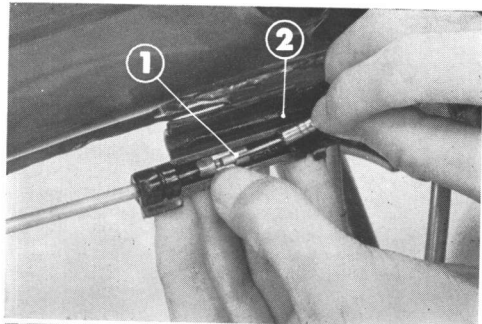

7. Separate the wire harness connector.

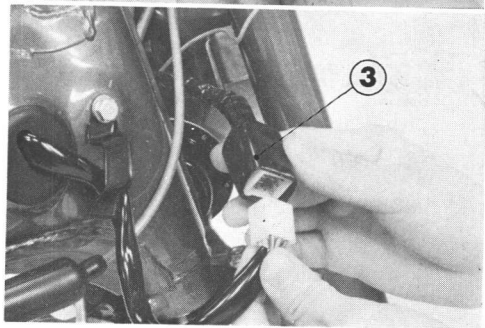

- ① Throttle cable ② Throttle cable cover
③ Wire harness connector