



**Headlight Bulb :** When exchanging the headlight bulb, perform in the following manner.

1. Loosen the mounting screw ① at the bottom of the headlight and remove the headlight rim.
2. Remove the socket assembly ② by pushing down on the socket and twisting counterclockwise to unhook from the reflector ③.
3. Pull the bulb out and replace.

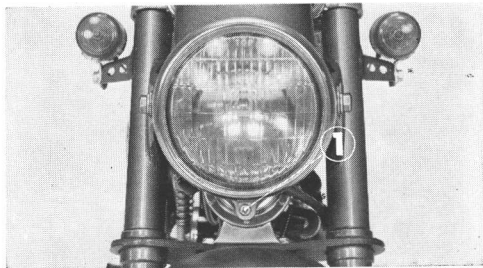

① Headlight rim mounting screw

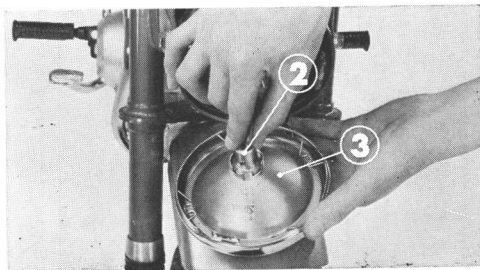

② Headlight socket      ③ Reflector