


**Tail/stoplight Bulb :** When exchanging the tail/stoplight bulb, perform the following manner.

1. Remove the two screws retaining the tail/stoplight lens.
2. Press the bulb ① inward and twist to the left, and the bulb can be removed.
3. When installing the taillight lens, do not over tighten the screws, as this may damage the lens.

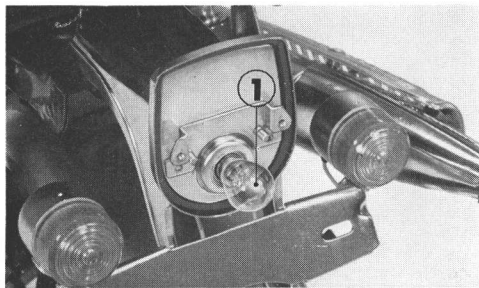

① Tail/stoplight bulb

**Turn Signallight Bulb :** The bulb replacement is made in the same manner as for the tail/stoplight bulb in the preceding paragraph.