

① Rubber cap ② Throttle cable adjuster


If grip free play rotation exceeds, this adjustment of the throttle cable adjuster ② is necessary.

Turn the cable adjuster until grip free rotation is reduced to 10~15°.

Fuel Strainer : The fuel strainer is incorporated in the right side of the carburetor. Accumulation of dirt in the strainer will restrict the flow of the fuel

and cause the carburetor to malfunction, therefore, the fuel strainer should be serviced periodically.

1. Turn the fuel valve to "S" position.
 2. Remove the fuel strainer cover and O ring seal ①.
 3. The screen fuel strainer ② can be removed from the carburetor.
- Wash in solvent and reassemble.

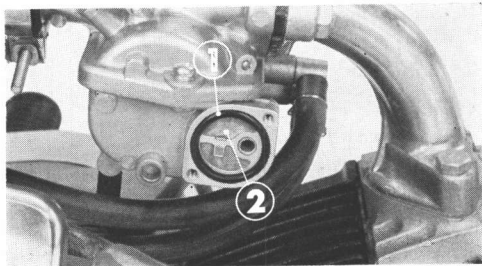

① "O" ring seal ② Fuel strainer