


## Air Cleaner Maintenance

If the air cleaner is clogged, it affects engine performance and, therefore, should be cleaned periodically.

1. Remove the right side cover.
2. Unscrew the three air cleaner mounting nuts ① with the 10 mm box wrench contained in the tool kit and remove the air cleaner case ②.
3. Remove the air cleaner element ③ from the case.
4. Wash the air cleaner element in clean

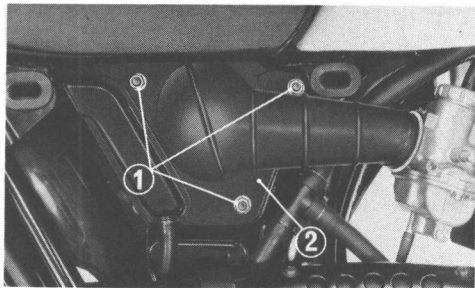


① Air filter mounting nuts    ② Air filter case

stoddard solvent and allow to dry thoroughly.

5. Soak the air cleaner element in clean gear oil (SAE 80–SAE 90) until saturated then squeeze out excess oil.
6. Reinstall the air cleaner element.
7. Reinstall the right side cover

**WARNING: Gasoline or low flash point solvents are explosive and highly flammable and must not be used to clean the air cleaner element. Fire or explosion could result.**

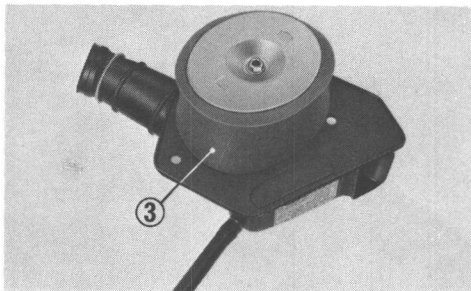

③ Polyurethane foam air filter element