
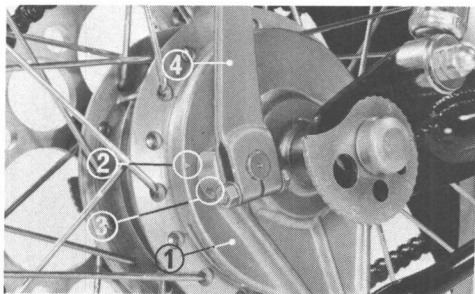


Brake Wear Indicator

On the TL125, the wear indicator is provided in the front and rear brakes. When the brake is applied, an arrow ③, adjacent to the brake arm ④, moves toward a reference mark ② on the brake panel ①. The distance between the arrow and the reference mark, on full application of the brake, indicates brake lining thickness. If the arrow aligns with the reference mark on full application of the brake,

replace the brake shoes.

NOTE: When brake service is necessary, or when brake adjustment is impossible (refer to pages 48~50), see your authorized Honda motorcycle dealer. When replacing brake shoes, install only genuine Honda parts.

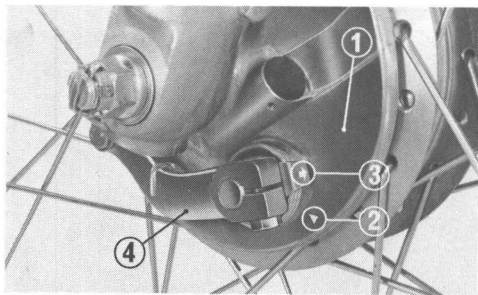

- | | |
|------------------|-------------|
| ① Brake panel | ③ Arrow |
| ② Reference mark | ④ Brake arm |