

## Front Wheel Removal


1. Place a wood block under the engine and raise the front wheel off the ground.
2. Remove the cotter pin ① and disconnect the front brake cable ② from the brake arm.

Unscrew the brake cable lock nut and disconnect the front brake cable from the brake panel.

3. Remove the cotter pin ③, the front axle nut ④ and remove the front axle. The front wheel can then be removed.
4. To install the front wheel, follow the reverse of removal procedure outlined in steps 1 through 3.

Be sure to tighten the axle nut to 350-500 kg·cm (26-31 lbs·ft).

**CAUTION:** Always replace used cotter pins with new ones.

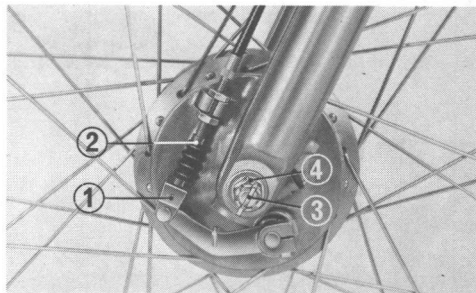

- |                     |                  |
|---------------------|------------------|
| ① Cotter pin        | ③ Cotter pin     |
| ② Front brake cable | ④ Front axle nut |