

Reverse and Neutral Indicator Lamps and Neutral Indicator

The reverse indicator lamp (1) and the neutral indicator lamp (2) (Fig. 2-10) are next to the ignition switch. These lamps allow the rider to verify that the transmission is in reverse or in neutral.

The reverse indicator lights when the transmission is in reverse and the ignition switch is ON.

The neutral indicator lamp lights when the transmission is in neutral and the ignition switch is ON.

The neutral indicator (3) is on the left crankcase cover. The indicator rotates as the gears are changed. The indicator aligns with the N mark on the crankcase when the transmission is in neutral.

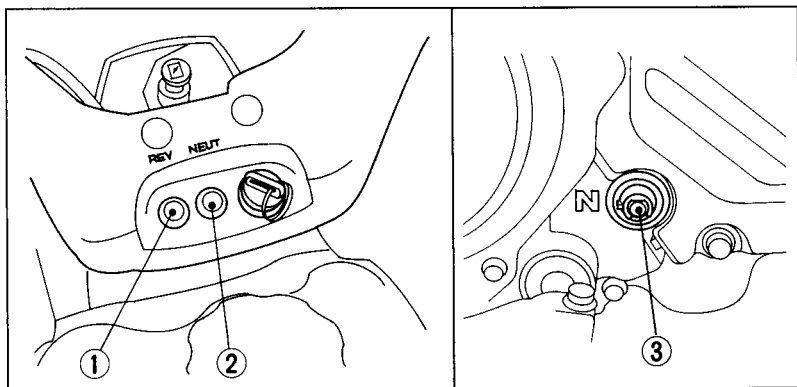


Fig. 2-10

- (1) Reverse indicator lamp
- (2) Neutral indicator lamp
- (3) Neutral indicator