

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean R: Replace A: Adjust L: Lubricate		EVERY	INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
*	BRAKE SHOE WEAR	YEAR 1 (NOTE 2)			111–114 117–120
	BRAKE SYSTEM		I	I	22, 111–121
*	REVERSE LOCK SYSTEM		I	I	107
*	CLUTCH SYSTEM		I	I	106
	SKID PLATE, GUARD PLATE			I	128
*	SUSPENSION			I	—
*	SPARK ARRESTER	(NOTE 5)		C	130, 131
*	NUTS, BOLTS, FASTENERS		I	I	—
**	WHEELS/TIRES		I	I	122–126
**	STEERING SHAFT HOLDER BEARINGS	YEAR 1			—
**	STEERING SYSTEM	YEAR 1			—

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.
2. Service more frequently after riding in very wet or muddy conditions.
3. Clean at first 30 days of operation and every year.
4. Replace every 2 years. Replacement requires mechanical skill.
5. USA only.

MAINTENANCE PRECAUTIONS

Before beginning any maintenance or repairs, read the appropriate instructions and warnings and make sure you have all the tools and materials you will need.

Choose a clean area that is level and has good ventilation and good light. Make sure the engine is off unless otherwise instructed. If you need to replace any parts, remember to use only new genuine Honda parts or their equivalents.