

D

| | |
|---------------------|--------|
| Dimmer switch | 19 |
| Dipstick | 26, 94 |

E

| | |
|--|--------|
| Emission control system | 135 |
| Engine | |
| Idle speed adjustment..... | 92 |
| Break-in procedures | ii |
| Engine guard | 121 |
| Flooded engine..... | 56 |
| Starting the engine..... | 53 |
| Engine oil | |
| Changing oil..... | 94 |
| Checking oil level and adding oil..... | 94 |
| Oil filler cap/dipstick..... | 26, 94 |
| Recommendations | 95 |
| Engine stop switch..... | 15 |
| Exhaust system | |
| Cleaning | 33 |
| Purging..... | 122 |

F

| | |
|---|--------|
| Final gear case oil | 98 |
| Flag pole bracket..... | 27 |
| Flooded engine | 56 |
| Fuel | |
| Fuel recommendations | 84 |
| Fuel fill cap..... | 24, 82 |
| Fuel tank capacity | 82 |
| Fuel valve..... | 25 |
| High altitude fuel mixture adjustment | 93 |
| Refueling..... | 82 |
| Reserve fuel supply | 25 |
| Fuse | |
| Location | 105 |
| Replacement..... | 106 |