

# Controls & Features

---

## Front Brake Lever

The front brake lever is used to slow or stop your ATV. To operate, pull the lever. For information on braking techniques, see page 55.

## Rear Brake Lever


The rear brake lever is used to slow or stop your ATV. To operate, pull the lever. For information on braking techniques, see page 55.

## Rear Brake Pedal

The rear brake pedal is used to slow or stop your ATV. To operate, depress the pedal. For information on braking techniques, see page 55.

## Parking Brake

### LEFT HANDLEBAR

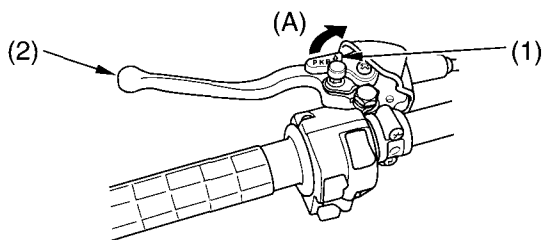

- (1) lock lever
- (2) rear brake lever/  
parking lever

(A) to lock

The lock lever (1) on the rear brake lever (2) allows it to be used as a parking brake. To operate, first squeeze the rear brake lever and then lock it with the lock lever. See *Parking* page 68.