

Owner's Manual Storage


Your ATV provides storage for the owner's manual so you'll have it with you for easy reference. Store your owner's manual (1) in the storage compartment (2) under the seat.

The storage box (3) is stored in the storage compartment. The storage box contains the owner's manual and tool kit (4) (including the air pressure gauge).

The owner's manual and spare fuse (5) should be stored in the plastic document bag (6). The storage box should be stored in the storage compartment.

Be careful not to flood this area when washing your ATV.

UNDER THE SEAT

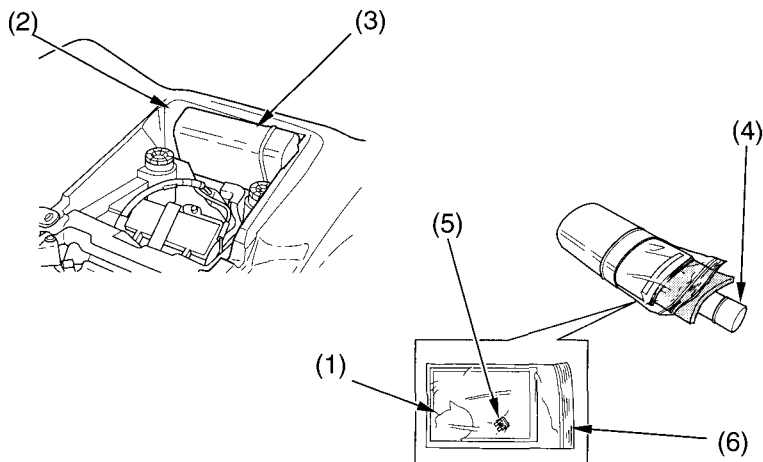

- (1) owner's manual
- (2) storage compartment
- (3) storage box

- (4) tool kit
- (5) spar fuse
- (6) plastic document bag