

Controls & Features

Front Brake Lever


The front brake lever is used to slow or stop your ATV. To operate, pull the lever. For information on braking techniques, see page 55 .

Rear Brake Pedal

The rear brake pedal is used to slow or stop your ATV. To operate, depress the pedal. For information on braking techniques, see page 55 .

Parking Brake

LEFT HANDLEBAR

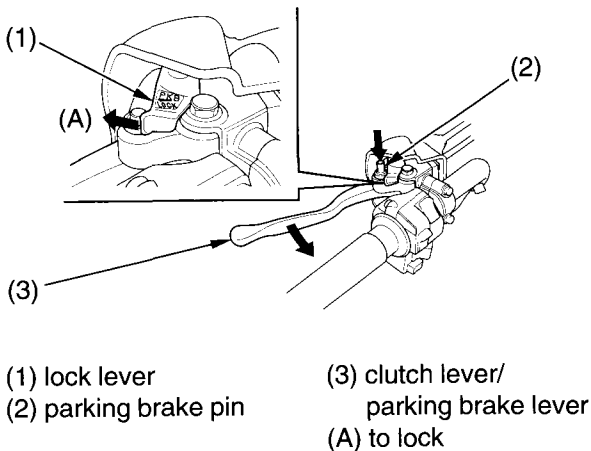

The lock lever (1) and parking brake pin (2) on the clutch/parking brake lever (3) allows it to be used as a parking brake. To operate, push down and hold the parking brake pin, squeeze the clutch lever/parking brake lever and then lock it with the lock lever. See *Parking* page 69 .