

# Basic Operation & Riding

---

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. and what to do when you're through riding.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 180).

For information about carburetor adjustment for riding at high altitude, see page 181.

Safe Riding Precautions .....	41
Off-Road Use Only .....	41
Keep Hands and Feet on Controls .....	42
Control Speed .....	43
Use Care on Unfamiliar or Rough Terrain .....	44
Do Not Perform Stunts .....	45
Starting & Stopping the Engine .....	46
Preparation .....	46
Starting Procedure .....	47
Flooded Engine .....	50
How to Stop the Engine .....	50
Shifting Gears .....	51
Riding in Reverse .....	53

(cont'd)