

# Indicators

---

## Reverse and Neutral Indicators


The reverse indicator ( 1 ) and the neutral indicator ( 2 ) are next to the ignition switch.

The reverse indicator will light when the transmission is in reverse and the ignition switch is ON ( I ).

The neutral indicator will light when the transmission is in neutral and the ignition switch is ON ( I ).

If one of these indicators does not come on when it should, have your Honda dealer check for burned-out bulbs or other problems.

### CENTRE OF HANDLEBAR

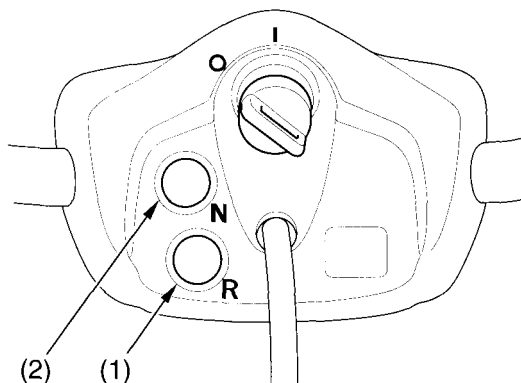

- (1) reverse indicator
- (2) neutral indicator