

# MAINTENANCE

## MAINTENANCE SCHEDULE

The maintenance intervals shown in the following schedule are based upon average riding conditions. FOUR TRAX's subjected to severe use, or ridden in wet or unusually dusty areas, require more frequent servicing. Items marked \* should be serviced by an authorized Honda dealer, unless the owner has the proper tools and is mechanically proficient. Other maintenance items are simple to perform and may be serviced by the owner. Perform the Pre-ride Inspection (Page 26) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean      R: Replace A: Adjust		INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page	
	ENGINE OIL	NOTE (1), (2)	R	R	44
*	ENGINE OIL FILTER		R	R	44
	AIR CLEANER ELEMENT	NOTE (2)		I	50
	SPARK PLUG			I	49
	BREATHING TUBE			I	54
*	VALVE CLEARANCE		I	I	51
*	CARBURETOR		I	I	46
	FUEL LINE		I: (EVERY YEAR)		45
*	FUEL STRAINER		C: (EVERY YEAR)		45
	THROTTLE OPERATION		I	I	60

**NOTE:** (1) Replace every 30 operating days or every 3 months, whichever comes first.  
 (2) Service more frequently when riding in dusty areas.