

### Reverse Indicator Lamp

The TRX250 is equipped with a reverse indicator lamp (1) to show when the transmission is in reverse. The reverse indicator lamp is on the handlebar cover and will light when the transmission is in reverse with the ignition switch ON.

### Neutral Indicator Lamp

The TRX250 is equipped with a neutral indicator lamp (2) to show when the transmission is in neutral. The neutral indicator lamp is on the handlebar cover and will light when the transmission is in neutral with the ignition switch ON.



- (1) Reverse indicator lamp
- (2) Neutral indicator lamp

### Fuel Gauge

The fuel gauge shows the approximate fuel supply available. At F (Full) there are 10.0 l (2.6 US gal), including the reverse supply. When the gauge needle enters the red band (2), fuel is low and you should refill the tank as soon as possible. The amount of fuel left in the tank when the needle enters the red band is approximately 4.0 l (1.1 US gal).



- (1) Fuel gauge