

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust L: Lubricate		INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
	BRAKE SYSTEM	I	I	55-57
*	REVERSE LOCK SYSTEM	I	I	-
	SKID PLATE, GUARD PLATE		I	62
*	CLUTCH SYSTEM	I	I	54
*	SUSPENSION		I, L	-
*	NUT, BOLT, FASTENER	I	I	-
**	WHEEL	I	I	-
**	STEERING SHAFT HOLDER BEARING	YEAR I		-
**	STEERING SYSTEM	YEAR I		-

* SHOULD BE SERVICED BY AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL "HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTE: (1) Service more frequently when riding in dusty areas, sand or snow.

(2) Service more frequently after riding in very wet or muddy conditions.